
# HOME DECORATORS COLLECTION


## SK17779AR2 BRAMLEY HUTCH 44"Hx17.6"Wx14"D INV# 19281 ASSEMBLY INSTRUCTIONS


Made In China

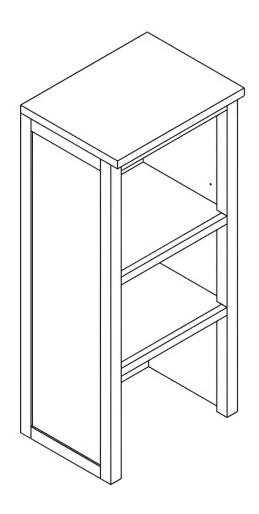

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

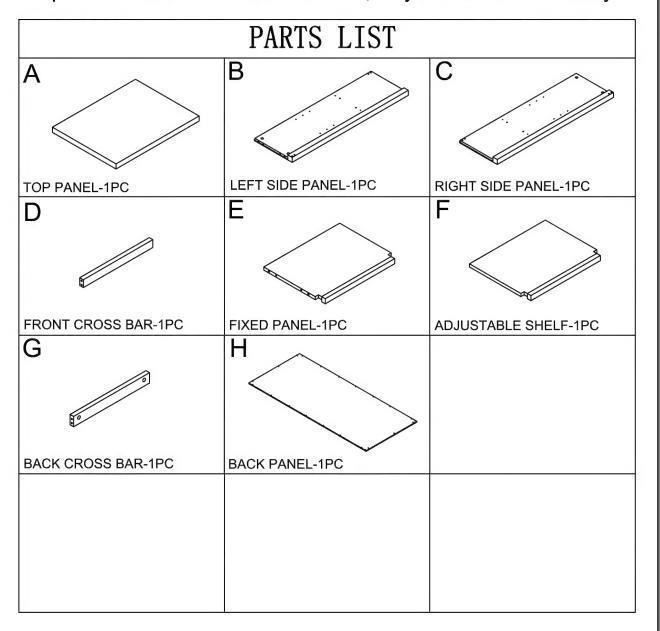

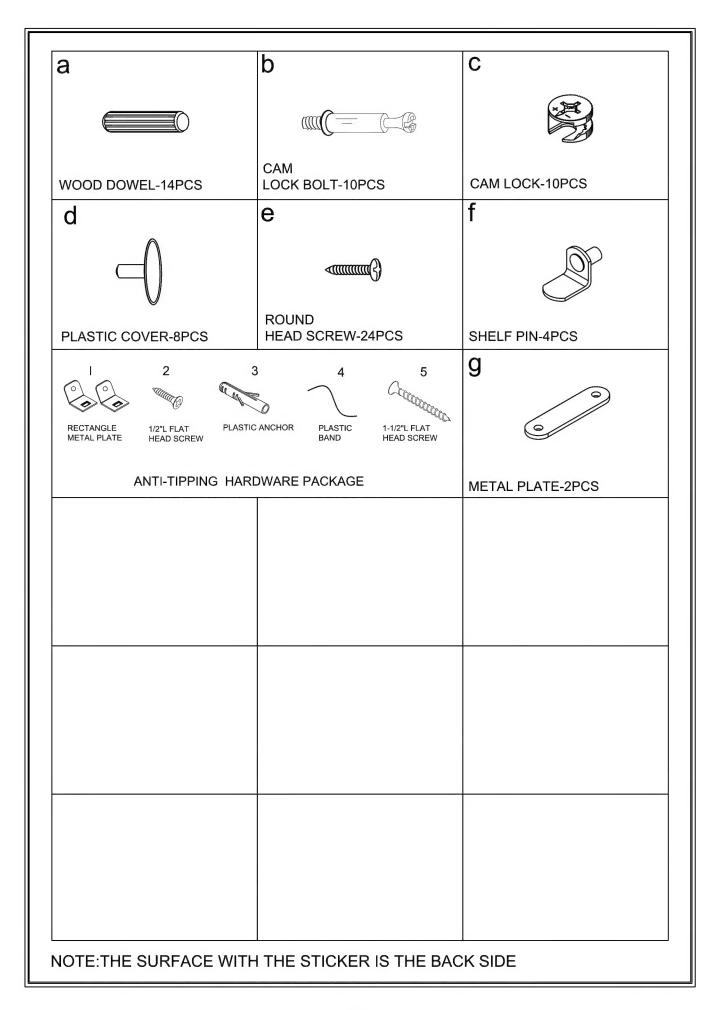



NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST

AND DIRT THAT MAY HAVE SETTLED ONTO THE FINISH DURING SHIPMENT. IN

ORDER TO PREVENT DAMAGE DURING ASSEMBLY. PLEASE ASSEMBLE THIS ITEM

WITH AT LEAST TWO PEOPLE.

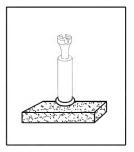

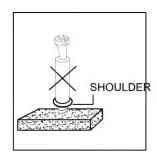


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY

ARE TIGHT, THE SHOULDER SHOULD BE


AGAINST THE SURFACE OF THE PART.

#### HOW TO USE THE CAM-TOOL

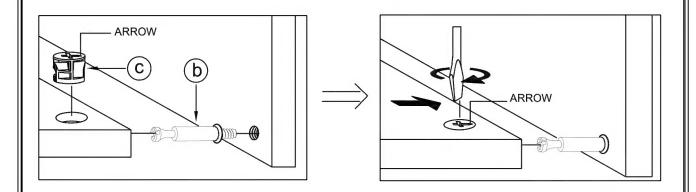


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS.

#### FIG<sub>1</sub>

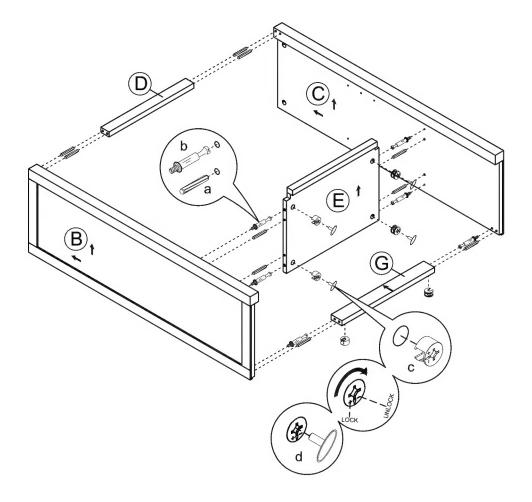


- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE LEFT SIDE PANEL (B) AND THE RIGHT SIDE PANEL (C).
- JOIN THE LEFT SIDE PANEL (B) AND THE RIGHT SIDE PANEL (C) TO THE FRONT CROSS BAR (D) THE BOTTOM PANEL (E) AND THE BACK CROSS BAR (G) BY USING THE WOOD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) BY USING THE CAM LOCK (c) FROM PRE-DRILLED HOLES.
- COVER THE CAM HOLES WITH PLASTIC COVER (d).

#### FIG 2

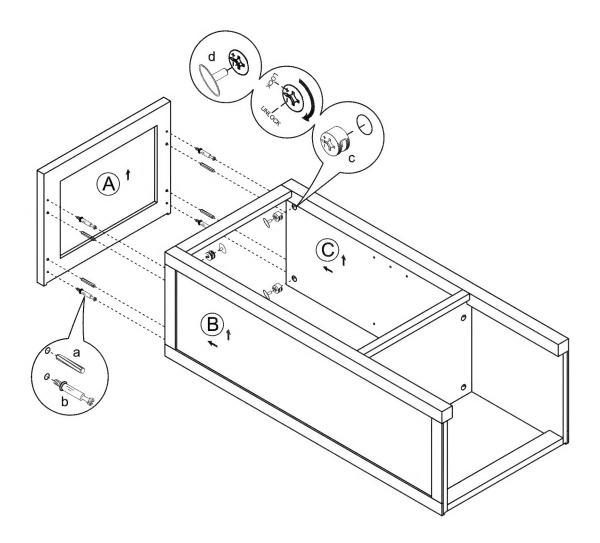


- INSTALL THE WOOD DOWEL (a) AND THE CAM LOCK BOLT (b) INTO THE TOP PANEL (A).
- JOIN THE TOP PANEL (A) TO THE ASSEMBLED PART BY USING WOODD DOWEL (a) FIRST.
- TIGHTEN THE CAM LOCK BOLT (b) BY USING THE CAM LOCK (c) FROM PRE-DRILLED HOLES.
- COVER THE CAM HOLES WITH PLASTIC COVER (d).

FIG 3

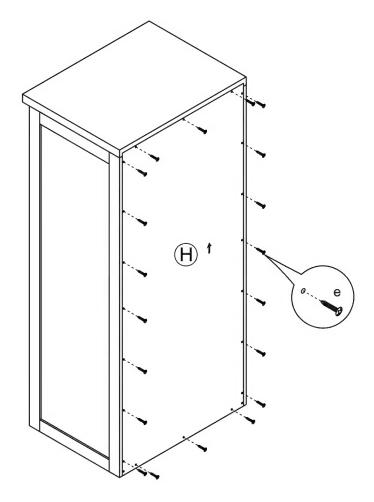


• TIGHTEN THE BACK PANEL (H) BY USING THE ROUND HEAD SCREW (e).

### FIG 4

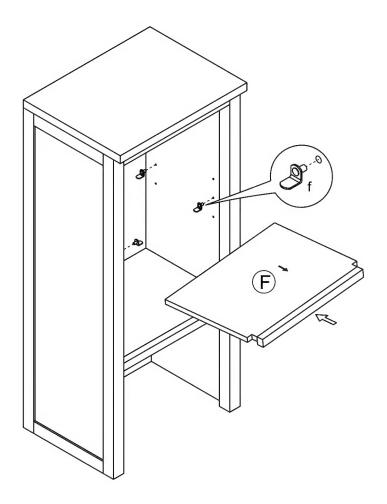

• INSERT THE SHELF PIN (f) IN THE DESIRED POSITION AND THEN PLACE THE ADJUSTABLE SHELF (F) ON THE PINS.

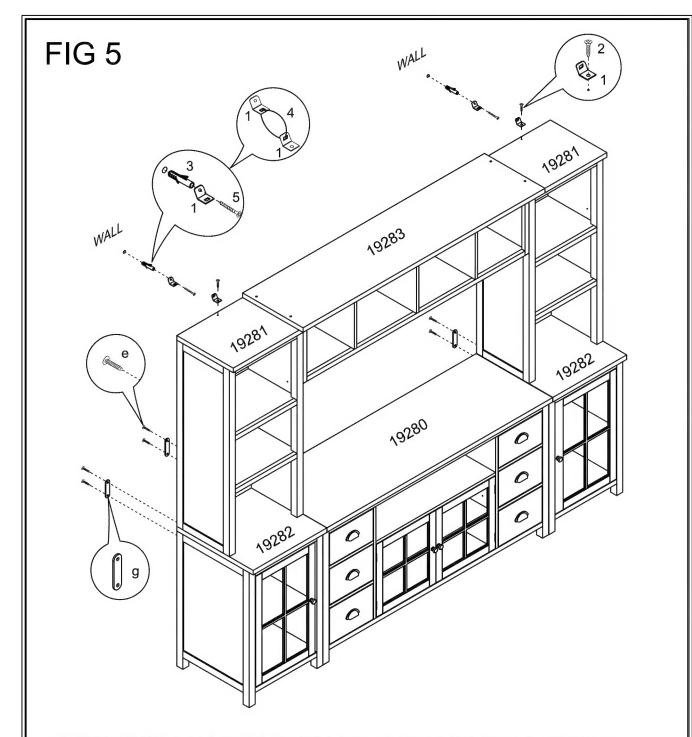

- TIGHTEN THE METAL PLATE (g) THE BACK PANEL (H) BY THE ROUND HEAD SCREW (e).
- TIGHTEN THE RECTANGLE METAL PLATE (1) TO THE REAR OF THE TOP PANEL (A) BY USING 1/2" FLAT HEAD SCREW (2).
- PLACE THE ASSEMBLED BOOKCASE AT THE DESIRED POSITION. MARK THE INSERTION POINTS FOR THE PLASTIC ANCHOR (3).
- USING THE PROPER HARDWARE FOR YOUR WALL TYPE, DRILL TWO 1/4" HOLES INTO THE WALL.
- TIGHTEN THE RECTANGLE METAL PLATE (1) TO THE PLASTIC ANCHOR (3) BY USING THE 1-1/2" FLAT HEAD SCREW (5).
- USING THE PLASTIC BAND (4) CONNECT TWO RECTANGLE METAL PLATES (1).